


# TITANIUM BULLY BEARING RACE INSTALLATION

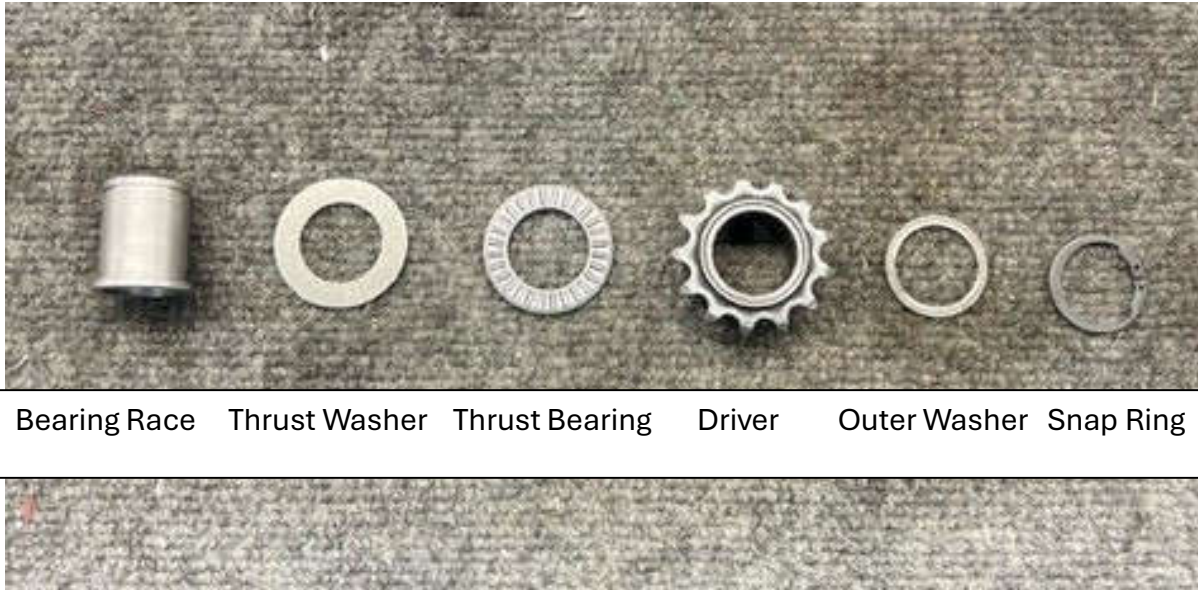

## **Installation:**

Place the thrust washer on the bearing race, followed by the thrust bearing. Now insert the bearing race through the driver (while it is inserted into your basket). Once the bearing race has been inserted in the driver, place the outer washer and the snap ring on the bearing race. This now completed the bearing race installation on your driver and basket.



NOTE – The bearing race should have approximately .015 worth of side-to-side play. You may need to play with different thrust washers and outer washers to achieve this, as OEM Bully vs aftermarket drivers can be different, and even older OEM drivers will be different than newer OEM